


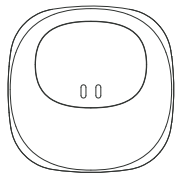

UVC Toothbrush Sterilizer


User Manual



Safety Instructions:

1. Please read the instructions carefully before using.
2. For children, please use it under the supervision of adults.
3. Strong ultraviolet rays are harmful to eyes and skin. It is strictly prohibited to look directly at the UV module or be exposed to the UV module under the working condition for a long time.
4. The product contains high-temperature parts. Do not touch the metal parts in the device.
5. The product contains electronic part, do not put the product into water for cleaning, the surface of the product can be wiped with a wet towel.
6. The product has a rechargeable battery inside. Do not put it in water, fire, or high-temperature environments. Dispose of the product in accordance with local laws and regulations.

Instruction

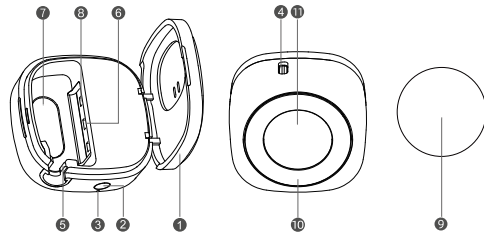

- ① Cover: Device operation is initiated or terminated by opening or closing the cover.
- ② Function Button: Initiate or terminate device operation.
- ③ Indicator Light: Indicate the working and battery status.
 - Flashing green light: Device is working.
 - Flashing red light: Low battery level.
 - Steady red light: Charging.
 - Steady green light: Battery fully charged.
- ④ Type-C Charging Port: Connect with a Type-C charging cable and a DC 5V adapter for charging and activating the heating function.
- ⑤ Silicone Toothbrush Stand: Secure toothbrush.
- ⑥ UV LED : Sterilize items inside the device.
- ⑦ Heating Plate: Dry items inside the device.
- ⑧ Orange LED: Light up during heating operation.
- ⑨ Iron Plate: Attach and secure the device, with adhesive backing.
- ⑩ Anti-slip Silicone Pad: Prevent device from rotating and slipping.
- ⑪ Magnetic Attraction Area: Area where the device is magnetically attached.

Installation



1. Clean and dry the surface of the place which to be pasted. Remove the protective film from the adhesive tape on the back of the iron plate.



2. Stick the iron plate on the clean surface in the correct direction and press it to ensure that it is completely pasted.



3. After 12 hours, attach the device to the iron plate magnetically. Put the toothbrush in the device to use.



4. The device can be easily detached from the iron plate for easy portability.

How to use

Before using this product, please shake off the water from the toothbrush vigorously to ensure it is as dry as possible.

Turn On

To start disinfection, open and then close the cover. Alternatively, long press button ② for 2 seconds.

Turn Off

While the device is working, either open the cover or press the button ② once to stop

the disinfection process.

Disinfection Mode (3 minutes)

When the device is not connected to power, UV disinfection works for 3 minutes. If the device is plugged in during UV disinfection, it will automatically switch to the 120-minute disinfection heating mode.

Disinfection Heating Mode (120 minutes)

When the device is connected to power, UV disinfection and heating start simultaneously. After 3 minutes, UV disinfection stops. In the last 1 minute, disinfection resumes, heating continues throughout. If the device is unplugged during disinfection heating, it will switch back to the 3-minute disinfection mode automatically.

Attention

The heating function can only be activated and used when the power adapter is connected. When using the heating function, please use the original charging cable and a DC 5V 1A adapter that complies with local power supply laws and regulations.

Cleaning and Maintenance

1. The product contains electronic part, do not put the product into water for cleaning, the surface of the product can be wiped with a wet towel.
2. Do not cover the device while it is in working condition, and ensure that the working environment remains dry to prevent water ingress or prolonged exposure to humidity.
3. The device contains a rechargeable lithium battery. When the indicator light flashes red, use the original TYPE-C charging cable provided with the product to connect it to a DC 5V 1A adapter that complies with relevant national regulations

for charging. Ensure timely charging to maintain battery life.

4. When the battery is fully charged or the heating function is not required, please disconnect the power supply of the adapter in time.

Specification

Model: CTX1
Battery: 3.7V, 300mAh, rechargeable battery
Power consumption: 3W (maximum)
Power input: DC 5V 1A, USB Type-C
Operating temperature: 32 °F ~ 113 °F
Size: 50*50*22mm
Weight: Around 40g
Package content: Sterilizer *1, Iron plate *2, 1A Type-C charging cable *1, instruction manual *1

Warranty

If you need aftersales service, please contact the sales channel or our aftersales customer service in time. For specific operations, please fill out this user information card and send it back with the product.

Name: _____ Phone: _____

Address: _____

Purchase date: _____

Order number: _____

Dealer name: _____

Fault description: _____

