


# JetFresh

## Toothbrush Disinfecter


### User Manual



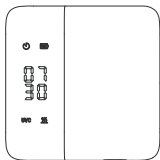


#### **Safety Instructions:**


1. Please read the instructions carefully before using.
2. For children, please use it under the supervision of adults.
3. Strong ultraviolet rays are harmful to eyes and skin. It is strictly prohibited to look directly at the UV module or be exposed to the UV module under the working condition for a long time.
4. The product contains high-temperature parts. Do not touch the metal parts in the device.
5. The product contains electronic part, do not put the product into water for cleaning, the surface of the product can be wiped with a wet towel.
6. The product has a rechargeable battery inside. Do not put it in water, fire, or high-temperature environments. Dispose of the product in accordance with local laws and regulations.
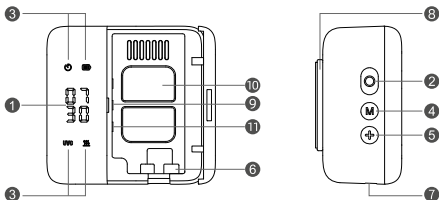
# Instruction




- ① Display Screen: display the current system time and working status.
- ② Power Button (⊙): turn the device on and off, initiate or terminate disinfection program.
- ③ Indicator Light
  - UVC** UVC Indicator Light: The light stays on when UVC works.
  -  Automatic Indicator Light: The light stays on when automatic disinfection mode is activated.
  -  Heating Indicator Light: The light stays on when heating works.
  -  Battery Indicator Light
    - Flashing red light: battery low, charge needed.
    - Steady red light: charging.
    - Green light: battery fully charged.
- ④ Clock Set Button (M): switch to the clock setting interface.
- ⑤ Multi-function Button (+)
  - Adjust the clock's hours and minutes.
  - Switch to clock display during disinfection program.
  - Turn automatic mode on or off.
- ⑥ Silicone Toothbrush Stand: Secures toothbrush, removable for cleaning.
- ⑦ Type-C Charging Port: connect with a Type-C charging cable and a DC 5V adapter for charging and activating the heating function.
- ⑧ Mounting board: Adhesive on the back for installing and securing the device.
- ⑨ UVC: Disinfects items inside the device.
- ⑩ Heating Plate: dry items inside the device.
- ⑪ Orange LED: Light up during heating operation.


# Installation

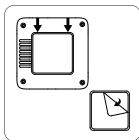


1. Clean and dry the surface where the mounting board will be pasted. Remove the protective film from the adhesive tape on the back of the mounting board.

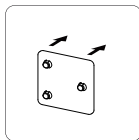

2. Stick the mounting board on the clean surface in the correct direction and press firmly to ensure complete adhesion.

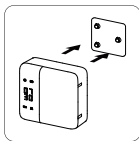

3. After 24 hours, install the main unit on the mounting board, ensuring that it is secured properly.

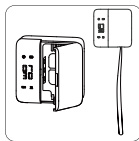

4. Hang the toothbrush on the device and then use its functions.

## How to use

Before using the product, shake off excess water from the toothbrush to ensure it is as dry as possible.

### Turn On and Off

#### Turn On

Long press button ② for 3 seconds. The screen will display a boot-up animation, followed by the time. For first-time use, you must long press button ② for 3 seconds to turn the device on.

## Turn Off

Long press button ② for 3 seconds. The screen will display a shutdown animation. Note that turning the device back on will reset the disinfection program.

## Clock

### Clock Adjustment

Press button ④ to enter the clock setting interface. The hour digits will flash. Press button ④ again to switch to minutes, and the minute digits will flash. Use button ⑤ to adjust the hours and minutes while they are flashing. After completing the adjustments, remember to press button ④ again to save the set time. The clock setting interface will automatically exit if no button is pressed within 15 seconds.

### Clock Display

- After the device completes any of the following actions—powering on, opening the cover, setting the clock, or finishing the disinfection process—the screen automatically displays the time. If no action is taken within 60 seconds, the screen will automatically turn off.
- When the device is running the disinfection program, press button ⑤ to display the current system time. To exit the clock display, press the same button again. If no button is pressed within 60 seconds, the clock display will automatically exit.

### Attention

The clock has a memory function. When using the clock for the first time, it needs to be set to the correct time. If the battery is completely depleted, the clock will need to be reset.

## Disinfection

Before using the product, shake off excess water from the toothbrush to ensure it is as dry as possible.

### Manual Disinfection

To start disinfection, open and then close the cover. Alternatively, press button ②. There are two working modes.

- **Quick Disinfection Mode:** When the device is not plugged in, the screen displays a 3-minute countdown, UVC and fan work continuously until the countdown ends.
- **Drying and Disinfection Mode:** When the device is plugged in, the screen displays a

60-minute countdown, UVC and fan start working. After 3 minutes, UVC stops, and heating works. When the countdown shows 3 minutes, heating stops and UVC resumes. The fan works continuously throughout the entire countdown.

## Automatic Disinfection

Off by default. To turn it on, long press button ⑤ for 2 seconds until the display shows "AUTO". The device automatically initiates disinfection at 06:00, 07:00, 20:00, and 21:00 (based on system time). There are two working modes.

- **Mode1:** When the device is not plugged in, the screen displays a 1-minute countdown, UVC and fan work continuously until the countdown finishes.
- **Mode2:** When the device is plugged in, the screen displays a 6-minute countdown. The fan and heating start working. After 5 minutes, the heating stops, UVC works, and the fan works continuously throughout the entire countdown.

To turn it off, long press the same button for 2 seconds until the display shows "AOFF". Automatic disinfection will automatically be canceled when the battery is low.

## Attention

1. During disinfection, pressing button ② will terminate the current program without canceling automatic disinfection mode.
  2. If the cover is opened during the program, it will pause, and the display will flash "OPEN." Once the cover is closed, the device will continue running until the program ends. If the cover remains open for 5 minutes or longer, the program will terminate, and the display will turn off.
  3. While the disinfection program is running, plugging in the power will not change the current program. However, unplugging the power will terminate the program.
  4. The heating function can only be activated and used when the power adapter is connected.
- To ensure electrical safety, When using the heating function, please use the original charging cable and a DC 5V 1A adapter that complies with local power supply laws and regulations.

## Cleaning and Maintenance

1. The silicone toothbrush stand can be removed separately for cleaning. After cleaning, allow it to dry completely before reassembly. Other parts containing electronic components should only be wiped with dry cleaning cloths dampened with water or cleaning agent.

2. Do not cover the device while it is in working condition, and ensure that the working environment remains dry to prevent water ingress or prolonged exposure to humidity.
3. The device contains a rechargeable lithium battery. When battery indicator light flashes red, use the original TYPE-C charging cable provided with the product to connect it to a DC 5V 1A adapter that complies with relevant national regulations for charging. Ensure timely charging to maintain battery life.

## Specification

Model: ES X7

Material: ABS+PC

Battery: 3.7V, 650mAh, rechargeable battery

Charging input: DC 5V 1A, USB Type-C

Rating power input: Maximum 5W, DC 5V 1A

Operating temperature: 32 °F ~ 113 °F

Dimensions: 66\*66\*34mm

Weight: Around 83g

Package content: Sanitizer main unit \*1, mounting board \*2, 1A Type-C charging cable \*1, user manual \*1

## Warranty

If you need aftersales service, please contact the sales channel or our aftersales customer service in time. For specific operations, please fill out this user information card and send it back with the product.

Name: \_\_\_\_\_ Phone: \_\_\_\_\_

Address: \_\_\_\_\_

Purchase date: \_\_\_\_\_

Order number: \_\_\_\_\_

Dealer name: \_\_\_\_\_

Fault description: \_\_\_\_\_

